



001 Left Plate Ball Bearing	041 Strike Stop	082 Drive Shaft Holder
002 Cooling Shield Screws	042 Lever Thrust Ring A	083 Bar Stop
003 Cooling Shield	043 Lever Thrust Ring B	084 Friction Washer
004 Pressure Plate	044 Sound Pin Spring	085 Gear Cross Bar
005 Drag Carbon Washer	045 Pin Cap	086 Friction Washer
006 Drag Washer Screws	046 Locator Shaft	087 Drive Gear (Slow)
007 Alert Washer	047 Locator	088 Drive Gear(Fast)
008 Pressure Spring Pin	048 Locator Screw A	089 Shaft Insert Spring
009 Pressure Spring	049 Locator Screw B	090 Drive Shaft Screw
010 Spool Ball Bearing	050 E-shape Lock	091 Drive Shaft(Slim)
011 Machined Cut Spool	051 Dial Click Shoe	092 Alert Slide Washer
012 Alert Ratchet	052 Friction Shoe Spring	093 Alert Spring
013 Alert Ratchet Screws	053 Pre-Program Dial	094 Alert Plunger
014 Handle Ball Bearing	054 Button Shield	095 Alert Plunger Pin
015 Spool Washer Ring	055 Push Button Shaft	096 Alert Socket
016 Spool Washer Ring	056 Push Button Out Nut	097 Stand Seat Screws
017 Spool Drive Gear(Slow)	057 Push Button Cap	098 Stand Seat Nut
018 Main Shaft	058 Push Button Inside Nut	099 Stand Seat Screws
019 Cross Pin	059 Slide Plate	100 Stand Seat Plate
020 Spool Drive Gear(Fast)	060 Slide Plate Spring	101 Stand Seat Washer
021 Metal Plate Screws	061 Push Button Pin	102 Wrench
022 Left Side Plate Cover	062 Button Plate	103 Ball Bearing Cushion
023 Set Plate Pin	063 Handle	104 Strike Alert Lever Screw
024 Clicker Pawl	064 T-knob Pin	105 Right Side Plate Cover
025 Spring	065 T-knob Pin Washer	106 Drag Control Sound Nut
026 Spring Screws	066 T-knob Pin Tube	107 Drag Control Sound Pin
027 Harness Lugs	067 Knob Ball Bearing A	108 Drag Control Lever
028 Harness Lugs Screws	068 Knob BB Screw	109 Cover Screws
029 Drag Plate	069 Perfect Knob	110 Alert Socket Screws
030 IPC Frame Housing	070 Knob Ball Bearing B	111 Screws
031 Right Plate Ball Bearing	071 BB Pressure Cover	112 Spare Parts
032 Pre-Program Screws	072 Ball Bearing Washer	113 Washer
033 Pre-Program Key	073 Speed Drive Shield	114 Spool Washer
034 Pre-Program Pin	074 Speed Spring	115 Pre-load Spring
035 Lever Shaft Body	075 Strike Alert Lever Nut	116 Spool Line Pin
036 Lever Shaft Washer	076 Strike Alert Lever	
037 Lever Quadrant	078 Cross Pin Spring	
038 Spool Detent	079 Alert Ratchet Pin	
039 Spool Detent Pin	080 Alert Pin Out Support	
040 Strike Stop Spring	081 Alert Pin Inside Support	